

FEATURES AND BENEFITS:

- SUITABLE FOR INTERIOR AND EXTERIOR USE.
- SECURES EDGE SEAMS FOR A WATER-TIGHT SEAL.
- APPROPRIATE FOR THIN-BED OR THICK-BED APPLICATIONS.
- TILE CAN BE INSTALLED SAME DAY AS MEMBRANE IF NO FLOOD TESTING IS REQUIRED.
- EXCELLENT COMPANION PRODUCT FOR THE EXTREME DECK SYSTEM.

RECOMMENDED USES:


SEAM TAPE IS A DOUBLE-STICK ELASTOMERIC TAPE DESIGNED FOR USE WITH NAC SHEET APPLIED OR LIQUID APPLIED WATERPROOFING SYSTEMS. SEAM TAPE SEALS AND WATERPROOFS SEAMS, JOINTS, SHOWER CURBS, DRAINS, EXTERIOR DECKS AND BALCONIES AND OTHER PROTRUSIONS. IT IS AVAILABLE IN 6" X 50' ROLLS AND CAN BE ORDERED IN CUSTOM WIDTHS. IT REQUIRES USE OF NAC TAC, NAC TAC II OR NS97 PRIMER PRIOR TO INSTALLATION (SEE PRIME REFERENCE CHART). SEAM TAPE IS NOT A STAND-ALONE PRODUCT, WHERE EXPOSED, COVER WITH MEMBRANE. SEAM TAPE IS NOT A STAND ALONE PRODUCT AND WHERE EXPOSED MUST BE COVERED BY MEMBRANE.

INSTALLATION INSTRUCTIONS:


- APPLY THE APPROPRIATE NAC PRIMER TO THE AREA WHERE THE SEAM TAPE AND MEMBRANE WILL BE INSTALLED.
- CUT SEAM TAPE TO DESIRED LENGTH AND POSITION WITH THE WHITE RELEASE PAPER FACING DOWN AND THE MEMBRANE OVERLAPPING SEAM TAPE BY 3".
- REMOVE WHITE RELEASE PAPER FROM THE UNDERSIDE AND APPLY SEAM TAPE TO THE AREA THAT WAS PRIMED.
- USE FLAT SIDE OF TROWEL TO PRESS SEAM TAPE INTO PLACE.
- ALLOW FIRST MEMBRANE SHEET TO OVERLAP SEAM TAPE BY 3".
- START SECOND MEMBRANE SHEET OVER THE REMAINING 3" OF TAPE AND BUTT-JOINTED NEXT TO THE FIRST SHEET. DO NOT OVERLAP MEMBRANE SHEETS.
- REMOVE PROTECTIVE FILE FROM THE TOP OF THE SEAM TAPE AND PRESS MEMBRANE INTO SEAM TAPE.
- USE FLAT SIDE OF TROWEL OR 75-100# ROLLER TO FINISH MEMBRANE INSTALLATION.
- FOR FLOOR TO WALL INSTALLATION, FLASH SEAM TAPE UP WALL 3" LEAVING 3" OF SEAM TAPE ON THE FLOOR.

NOTES:


1. INSTALLATION TO BE COMPLETED IN ACCORDANCE WITH MANUFACTURER'S SPECIFICATIONS.
2. DO NOT SCALE DRAWING.
3. THIS DRAWING IS INTENDED FOR USE BY ARCHITECTS, ENGINEERS, CONTRACTORS, CONSULTANTS AND DESIGN PROFESSIONALS FOR PLANNING PURPOSES ONLY. THIS DRAWING MAY NOT BE USED FOR CONSTRUCTION.
4. ALL INFORMATION CONTAINED HEREIN WAS CURRENT AT THE TIME OF DEVELOPMENT BUT MUST BE REVIEWED AND APPROVED BY THE PRODUCT MANUFACTURER TO BE CONSIDERED ACCURATE.
5. CONTRACTOR'S NOTE: FOR PRODUCT AND COMPANY INFORMATION VISIT www.CADdetails.com/info AND ENTER REFERENCE NUMBER 5101-013.

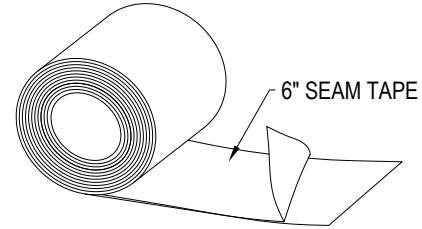


	INTERIOR APPLICATION			EXTERIOR APPLICATION		
	BELOW GRADE	ON GRADE	ABOVE GRADE	BELOW GRADE	ON GRADE	ABOVE GRADE
NAC TAC	X	X	X	X	X	X
NAC TAC II		X	X			
NS97				X	X	X

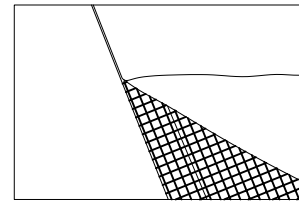


FLOOR
INSTALLATION
BUTT-JOINT
MEMBRANE
SEAMS

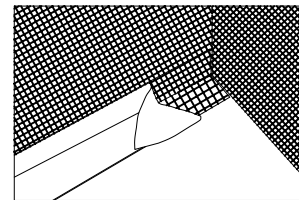

FLOOR TO WALL
EDGE SEAM

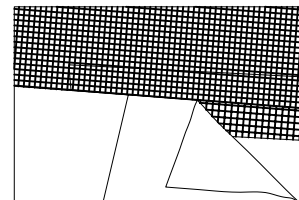

EDGE SEAM

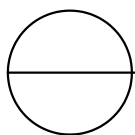

COMPANION PRODUCTS

MOISTURE LOCK 101®